

Hold sheet up to location, and mark circles (with measurements in red) for drilling holes to install and mount Evacuation Map Holder.

Colocar la lámina en el lugar deseado, marque los ciclos (con medidas en rojo) para taladrar orificio de instalación y montar el Porta Mapas de Evacuación.


Mette le papier à la place et marquez des cercles (avec dimensions en rouge) pour le perçage des trous afin d'installer le porte- carte d'évacuation.

Evacuation Map Holder | # DTA239 | Template Sheet & Mounting Instructions


Porta Mapas de Evacuación | #DTA239 | Lamina de Plantilla e Instrucciones de Instalación

Porte- carte d'évacuation | # DTA239 | Feuille de modèles et instruction de perçage.

- Drill Pilot Hole 5/32"
- Taladre un orificio piloto de 5/32"
- Percez un trou pilote 5/32"

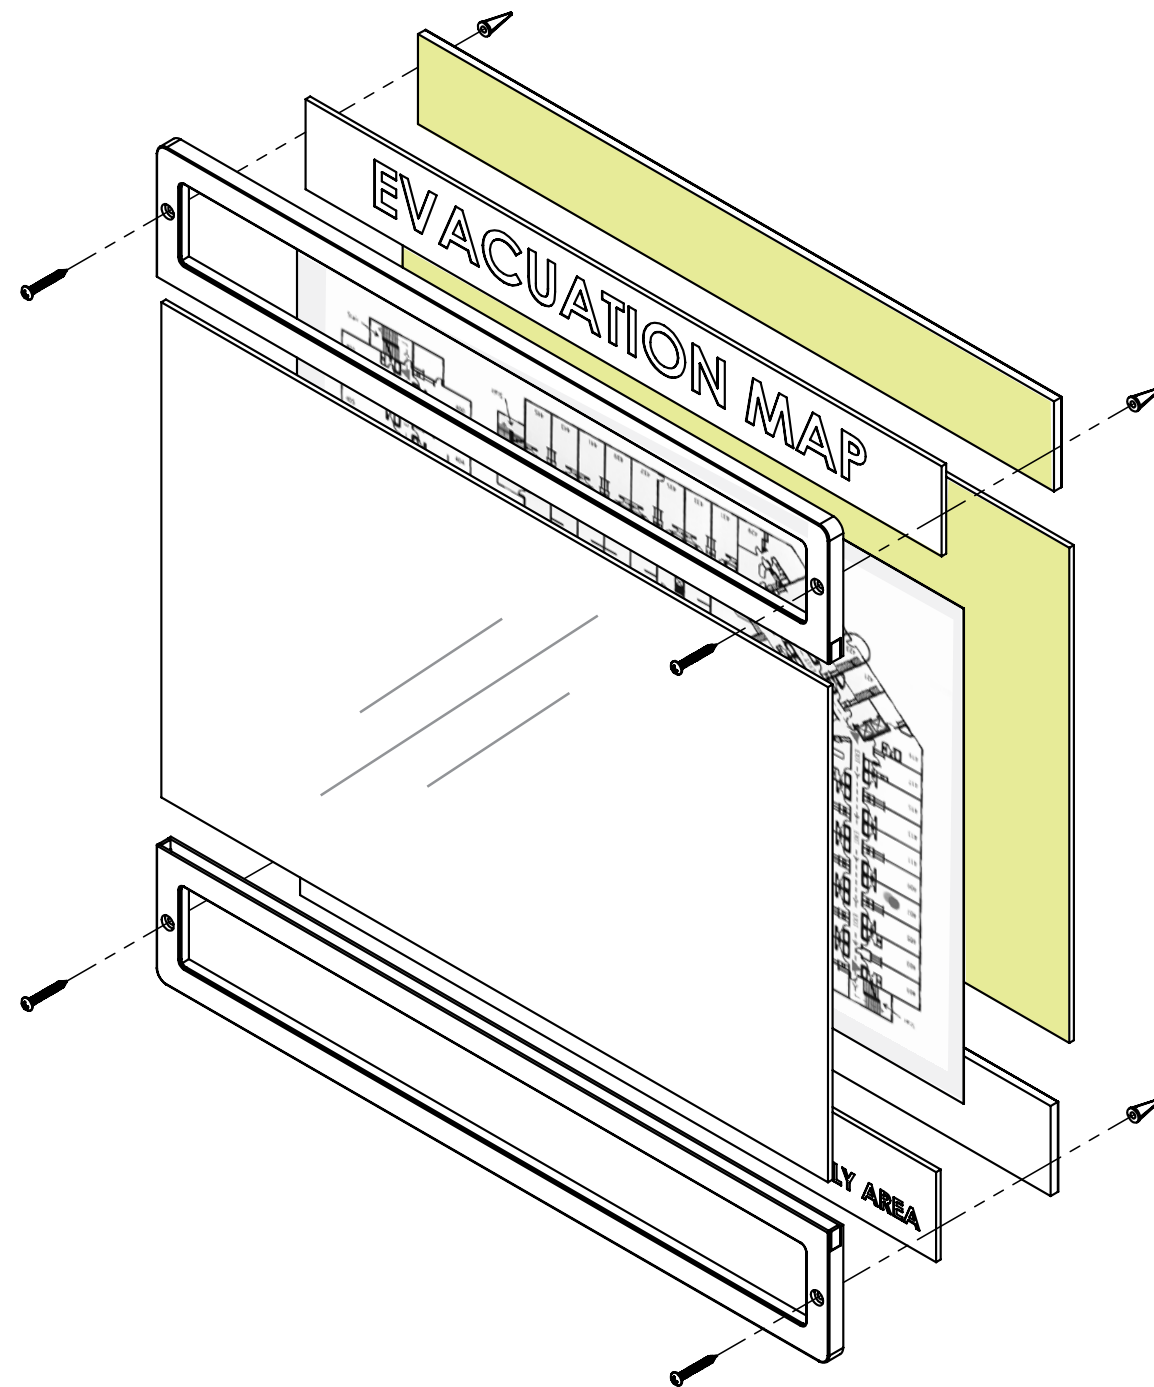

16 21/32"

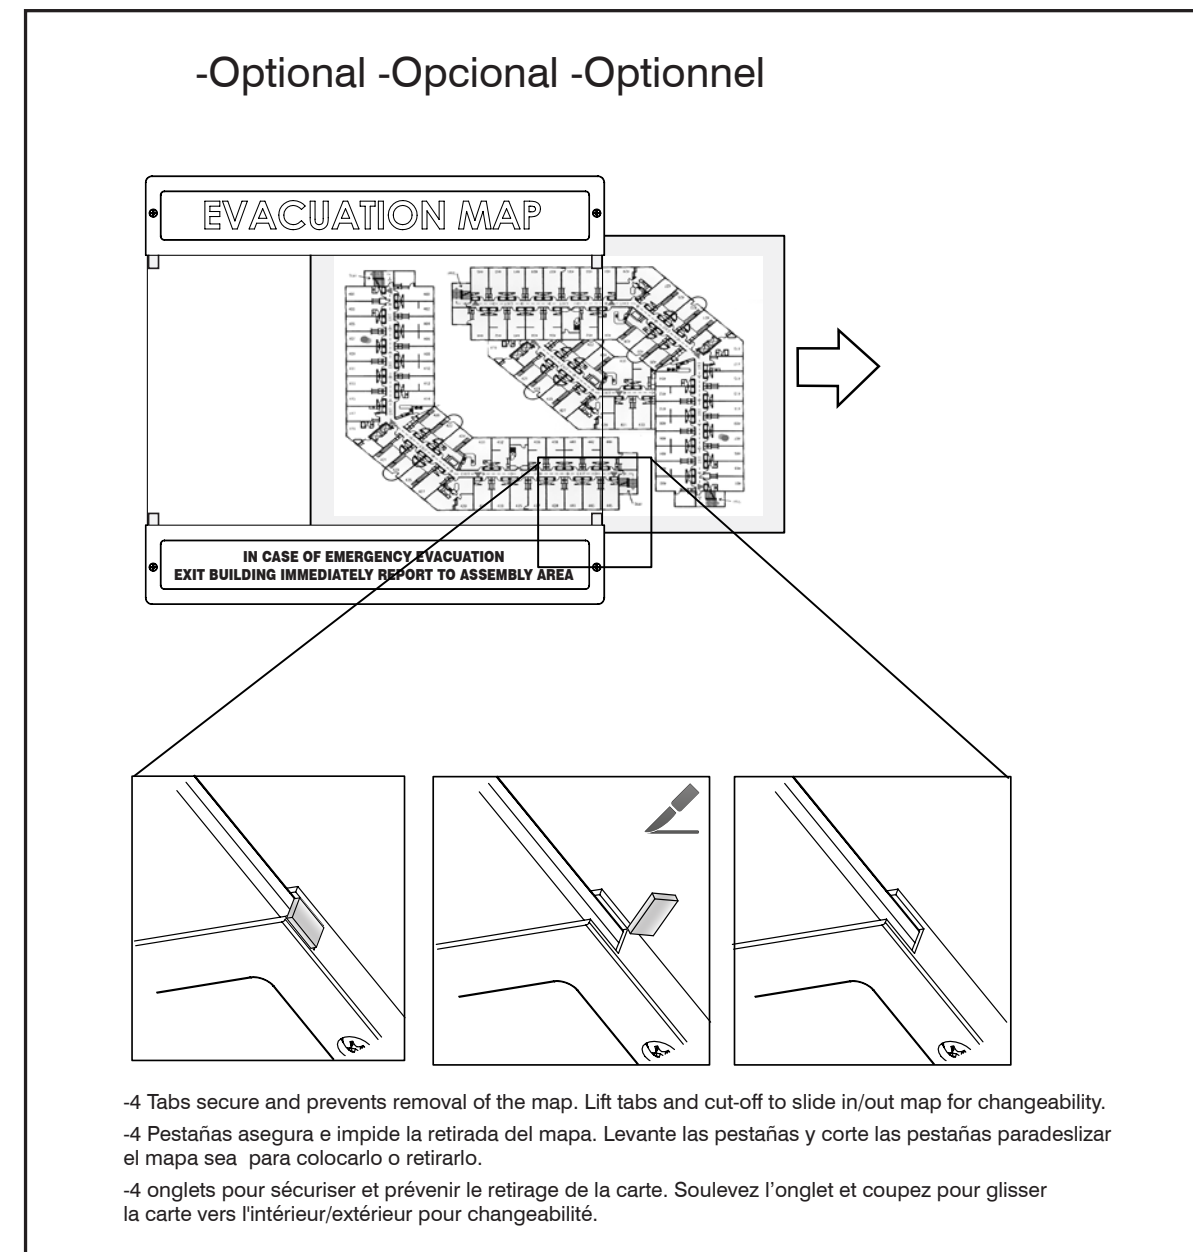

13 5/16"

-Contents -Contenidos -Contenu

